

Plastic Shrinking Cracking




This publication has been prepared by Cement Concrete & Aggregates Australia (CCAA) as general industry information only. It is not intended to provide engineering, technical, legal or other professional advice and must not be relied upon as a substitute for project-specific or professional advice. While reasonable care has been taken in preparing this publication, CCAA does not guarantee that the information is complete, accurate or current. Standards, regulations, technologies and industry practices may change over time. Users are responsible for independently assessing the relevance and accuracy of the information for their particular circumstances and obtaining appropriate professional advice where required. To the maximum extent permitted by law, CCAA disclaims all liability arising from use of or reliance on this publication.

PLASTIC SHRINKAGE Cracking

WHAT ARE PLASTIC SHRINKAGE CRACKS?

Plastic shrinkage cracks are so-called because they form while the concrete is still plastic, ie has not set. Rapid drying of the surface of the plastic concrete causes it to shrink and crack, but the cracks are not always evident during finishing operations and may not be discovered until the next day.

Plastic shrinkage cracks may form in a random manner or be roughly parallel to each other. The cracks are often almost straight, ranging in length from 25 mm to 2 m but are usually 300 to 600 mm long, **Figure 1a and 1b**. They rarely occur near the edges of a slab as at those locations the concrete is usually free to move. They can be up to 3 mm wide at the surface but usually taper quickly over their depth but may penetrate right through a concrete element. These cracks form a weakness in the concrete and will be widened and/or extended by subsequent drying shrinkage and thermal movement.

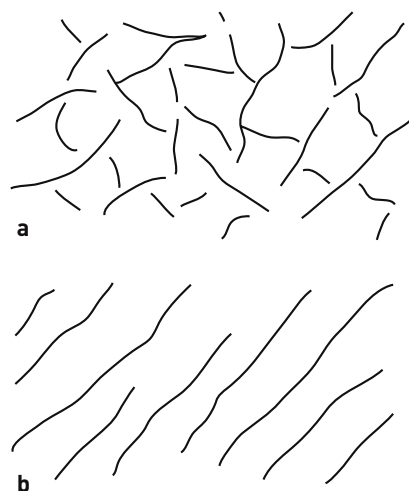

Figures 1a and 1b: Typical shrinkage cracking



PLASTIC SHRINKAGE cracks
may form in a random manner or
be roughly parallel to each other.

WHAT CAUSES PLASTIC SHRINKAGE CRACKS?

Simplistically, plastic shrinkage cracking occurs when the rate of evaporation of moisture from the surface exceeds the rate at which moisture is being supplied to it (via bleeding from the concrete). The concrete surface dries out and shrinks at a time at which it has little strength and hence it cracks. It can be likened to the cracking that occurs in clay soil as it dries.

Water is lost from the concrete mass in two main ways:

- **Drying from the top** Moisture rises to the top surface of a concrete element during placement – a process known as bleeding. Bleed water dries out mainly from evaporation; when the rate of evaporation exceeds the rate of bleeding, the surface dries and tends to crack.
- **Drying from the base** Water in a concrete slab may be absorbed into the subgrade or ground below. In addition to affecting bleeding this could significantly increase settlement of concrete and the risk of associated cracking.

The rate of evaporation from the surface is dependent on environmental factors such as temperature, relative humidity and wind speed. It is not just a hot weather phenomenon, as the combination of these factors may provide the worst conditions in cool weather with low humidity and wind.

Mix design sets the bleed capacity of the concrete. This may be changed from hot to cold conditions to suit the finishing operations and crack-control requirements. Concretes with low bleed potential (eg those containing a high proportion of fine material such as silica fume, fine aggregate, low slump) are more prone to plastic shrinkage cracking. However, mixes with high bleed characteristics are not recommended as a solution as they give rise to other problems (eg increased risk of plastic settlement cracking, crazing, delays in finishing processes, greater long-term shrinkage). Retarded concrete is also more prone to plastic shrinkage cracking because of the increased time that it remains in a plastic state.

The processes of screeding and finishing can also have an impact on the formation of plastic shrinkage cracks. Slower screeding rates and delayed trowelling can reduce the extent of plastic cracking.

Controlling the rate of drying of the surface (evaporation rate) is the key to avoiding plastic shrinkage cracking.

The evaporation rate can be determined from the relative humidity, air temperature, concrete temperature and wind velocity using the nomograph in **Figure 2**, or the equation developed by Uno¹. Cracking is most likely to occur when the environmental conditions give an evaporation

rate in excess of 1 kg/m²/h. It is recommended that precautions be taken when the anticipated evaporation rate is likely to exceed 0.5 kg/m²/h.

Uno gives the following equation to calculate evaporation rate

$$E = 5[(T_c + 18)^{2.5} - r(T_a + 18)^{2.5}](V + 4) \times 10^{-6}$$

where

E = evaporation rate (kg/m²/h)

r = relative humidity/100

T_a = air temperature (°C)

T_c = concrete (water surface) temperature (°C)

V = wind velocity (km/h)

NOTE: Temperature, humidity and wind velocity need to be measured on site to give a realistic picture of the evaporation conditions.

Both the nomograph and the equation are based on evaporation from a water surface and do not hold true after bleed water has disappeared from the surface, ie after the water sheen has disappeared.

IMPACT OF PLASTIC SHRINKAGE CRACKING

Plastic shrinkage cracking rarely impairs the strength of a concrete element. However, it will have a dramatic impact on the appearance of the concrete; where it penetrates full depth it may lead to water penetration problems.

PRACTICES TO MINIMISE PLASTIC SHRINKAGE CRACKING

To minimise the incidence of plastic shrinkage cracking:

- Dampen the subgrade and formwork, ensuring that any excess water is removed prior to placing concrete.
- In hot weather, lower the temperature of the fresh concrete by using chilled mixing water or replacing some of this water with crushed ice. See Data Sheet – *Hot Weather Concreting*³.
- Protect concrete surfaces from drying out.
 - Erect wind breaks to reduce wind velocity over the concrete surface. This is often impractical, but can be accomplished when frames or walls are erected prior to a floor being placed.
 - Apply aliphatic alcohols over the surface immediately after screeding and while there is plenty of bleed water on the surface; repeat the application in severe conditions. These products reduce the rate of evaporation from the surface. They are not a substitute for curing.
- Commence curing regime promptly after finishing and continue for the specified period.
- The use of sufficient proportions of synthetic or steel fibres in concrete can provide improved control of plastic cracking⁴.

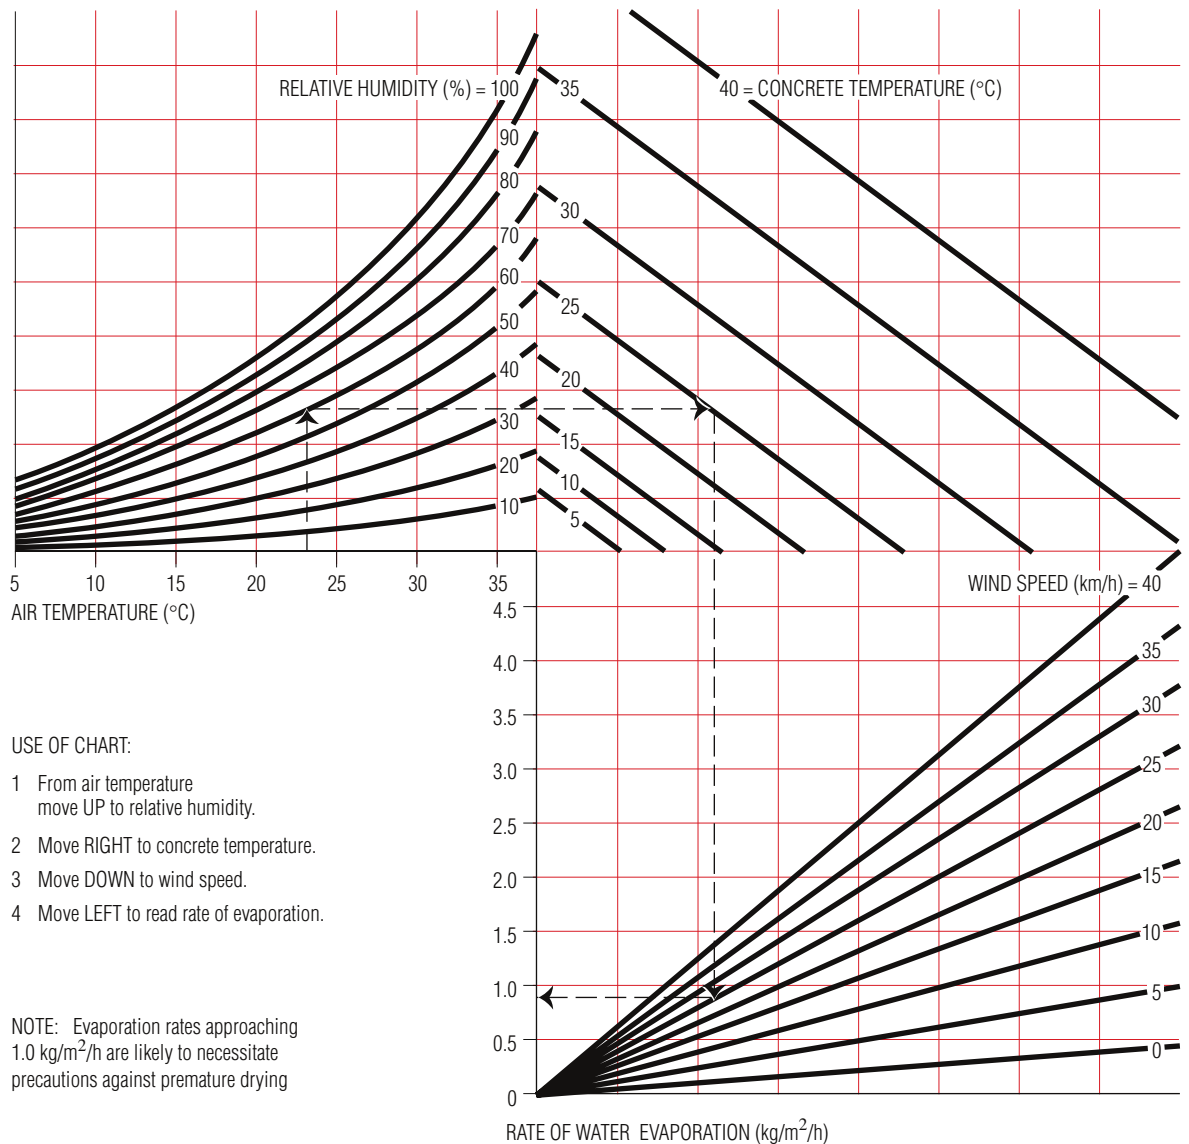


Figure 2: Effect of ambient conditions on rate of evaporation ACI 305²

REPAIR OF PLASTIC SHRINKAGE CRACKS

In pre-hardened concrete It is preferable to prevent plastic shrinkage cracking or to identify them while the concrete is still plastic and the surface can be re-worked to close the cracks, rather than rely on repair techniques.

Surface vibrators can be used to close the cracks over their full depth and the surface finishing can then be completed as specified. Careful timing is essential to ensure the concrete re-liquefies under the action of the vibrator and that the cracks close fully. Caution needs to be exercised in the use of re-trowelling alone since it may just form a skin (which can fracture with subsequent shrinkage, thermal or traffic impacts) over the cracks but not close them. If used it must be done as soon as the cracks become evident

Note: Additional working of the surface may change the colour and texture of the surface in that area.

In hardened concrete Once the concrete has hardened there is little that can be done. If the cracks are not wide at the surface then it may be best to tolerate them. Where they are of concern for watertightness or protection of the reinforcement, or 2 mm or wider, the cracks should be filled with a suitable proprietary filler. The object of such treatment is not to camouflage the cracks but to improve the performance of the concrete and ensure that the durability and wear characteristics of the surface are not impaired.

REFERENCES/FURTHER INFORMATION

- 1 Uno, P 'Plastic Shrinkage Cracking and Evaporation Formulas' *ACI Materials Journal* Vol 95, No 4, July–August, 1998, pp 365–375.
- 2 ACI Committee 305. 'Hot Weather Concreting' *ACI Manual of Concrete Practice, Part 2: Construction practices and inspection, pavements* American Concrete Institute, Farmington Hills, USA, 2005.
- 3 CCAA Data Sheets:
Hot Weather Concreting
Plastic Settlement Cracking
Early Age Concrete Shrinkage
Download from www.concrete.net.au.
- 4 Naaman A E, Wongtanakitcharoen T and Hauser G *Influence of Different Fibers on Plastic Shrinkage Cracking of Concrete* *ACI Materials Journal* Vol 102, No. 1 January–February 2005, pp 49–58.
- 5 Dux P F *Mechanisms and Significance of Cracking in Concrete* Paper presented at Concrete Institute of Australia Symposium, Brisbane, September, 2000.
- 6 *Guide to Concrete Construction* (T41/HB64) Cement and Concrete Association of Australia and Standards Australia, 2002.

CCAA OFFICES

SYDNEY OFFICE:

Level 6, 504 Pacific Highway
St Leonards NSW Australia 2065

POSTAL ADDRESS:

Locked Bag 2010
St Leonards NSW 1590

TELEPHONE: (61 2) 9437 9711

FACSIMILE: (61 2) 9437 9470

BRISBANE OFFICE:

Level 14, IBM Building
348 Edward Street
Brisbane QLD 4000

TELEPHONE: (61 7) 3831 3288

FACSIMILE: (61 7) 3839 6005

MELBOURNE OFFICE:

2nd Floor, 1 Hobson Street
South Yarra VIC 3141

TELEPHONE: (61 3) 9825 0200

FACSIMILE: (61 3) 9825 0222

EXTRACTIVE INDUSTRIES OFFICE

486 Albert Street
Melbourne VIC 3002

POSTAL ADDRESS:

GPO Box 4352QQ
Melbourne VIC 3001

TELEPHONE: (61 3) 8662 5333

FACSIMILE: (61 3) 8662 5358

PERTH OFFICE:

45 Ventnor Avenue
West Perth WA 6005

TELEPHONE: (61 8) 9389 4452

FACSIMILE: (61 8) 9389 4451

ADELAIDE OFFICE:

Greenhill Executive Suites
213 Greenhill Road
Eastwood SA 5063

POSTAL ADDRESS:

PO Box 229
Fullarton SA 5063

TELEPHONE: (61 8) 8274 3758

FACSIMILE: (61 8) 8373 7210

EXTRACTIVE INDUSTRIES OFFICE

Enterprise House
136 Greenhill Road
Unley SA 5061

TELEPHONE: (61 8) 8300 0180

FACSIMILE: (61 8) 8300 0001

TASMANIAN OFFICE:

EXTRACTIVE INDUSTRIES OFFICE
PO Box 59

Riverside TAS 7250

TELEPHONE: (61 3) 6330 2476

FACSIMILE: (61 3) 6330 2179

WEBSITE: www.concrete.net.au

EMAIL: info@ccaa.com.au

DESIGN: Helen Rix Design

Disclaimer: Cement Concrete & Aggregates Australia is a not for profit organisation sponsored by the cement concrete and aggregate industries in Australia to provide information on the many uses of cement and concrete. This publication is produced by CCAA for that purpose. Since the information provided is intended for general guidance only and in no way replaces the services of professional consultants on particular projects, no legal liability can be accepted by CCAA for its use.

CCAA respects your privacy. Your details have been collected to provide you with information on our activities, publications and services. From time to time your details may be made available to third party organisations who comply with the Privacy Act such as affiliated associations, sponsors of events and other reputable organisations whose services we think you may find of interest. If you do not wish to receive information from CCAA or wish to be taken off the database please write to the Privacy Officer, CCAA, Locked Bag 2010, St Leonards, NSW, 1590